

---

## Manual for Card Reader Use

---

In your Alliander vehicle, a telematics system has been installed by Fleet Complete to ensure you will have a complete trip administration, as required by the Tax Authority.

In your vehicle, you will only see the mounted card reader; all other hardware has been professionally installed behind the dashboard.

As soon as your ignition is on, you must log in with your Alliander pass on the mounted card reader. You do this by swiping the pass over the card reader, after which the beeping sound will stop and the LED will stay solid green, indicating that you have successfully registered as the driver of the vehicle.



The red button on the card reader is not connected and therefore has no function.

The card reader is configured so that no card other than your Alliander pass will be accepted to stop the beeping. If you initially present an invalid card, you must wait 30 seconds before offering your Alliander pass (the card reader memory resets itself after 30 seconds).

If the beeping does not stop and the green LED continues flashing, it means your login was not recognized, and you must contact **XXXXXX**.

If your Alliander pass is lost or defective, you must contact **XXXX** and request a replacement card.

Safe driving!

